



# RS SERIES

**Instruction Manual** RS200i RS500i RS800i

**QUICK SETUP!**

**SCAN CODE**

\*USE PHONE CAMERA



or visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/)

## Warnings

To prevent damage to your Vaultek® unit or injury to yourself or to others, read the following safety precautions before using this unit.



### **ALWAYS CHECK TO MAKE SURE THE DOOR HAS LATCHED WHEN CLOSING**

This safe uses a rugged latch system. **Door requires a firm press and will lock automatically when closed properly.**

**Change the default code as soon as possible to prevent unauthorized access to your safe.**

**DO NOT** place or store the backup keys inside the safe at any time. If the battery fails, you will be unable to open the safe.

**DO NOT** expose to extreme heat or cold. Battery power may be affected.

**DO NOT** use a battery which has physical damage such as scratches and dents on the housing. Replace the battery every 3 years.

**DO NOT** store loaded guns in this unit. Firearms are serious in nature and must be handled with respect. Store responsibly.

No safe or lock is impenetrable given the right skills and tools. Vaultek® Wi-Fi® can be connected to send you live alerts of critical safe activity including tampering and when the safe is opened. See page 16 for information.

**Keep this product away from small children as the package contains small items that could become a choking hazard.**

Further warnings and disclaimers on next page.

**DO NOT** operate a firearm without proper training and experience.

Be sure and follow all local and state firearm laws.

### Nano Key Warnings

**Take caution when using this feature and be responsible. Security can be compromised in the event Nano Key is lost or stolen. Only pair Nano Key after thoroughly understanding the inherent risks.**

To avoid unintentional safe opening, Nano Key should only be used when safe is in sight.

**WARNING** anyone including children can access the safe via Nano Key.

**ALWAYS** unpair Nano Key in the event it is lost or stolen.

### Disclaimers:

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR UNAUTHORIZED ACCESS, ANY INJURY, LOSS OR DAMAGE TO PERSONAL PROPERTY DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VAULTEK® SAFE.

THE USER SHALL DETERMINE THE SUITABILITY OF THE VAULTEK® SAFE BEFORE THE INTENDED USE AND USER ASSUMES ALL RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH. VAULTEK® SAFES ARE NOT INTENDED TO PROTECT AGAINST ENVIRONMENTAL HAZARDS INCLUDING FIRE AND WATER.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

**Register your product** online using the code on the right. Simply scan the code with your phone's camera or visit [www.vaulteksafe.com](http://www.vaulteksafe.com), click Support, then Product Registration. Enter the required information in the form and click submit.

Registration provides many benefits including three year warranty, technical support, and ordering replacement keys should you misplace them.



## Table of Contents

At Vaultek® we stand behind our product and you our customer. On behalf of the entire team thank you for your purchase. We believe personal defense should be handled seriously and we're excited for you to experience the ultimate performance in smart-security.



### Quick Start Guide

- Step 1** Programming Master Code (08)
- Step 2** Programming Biometric Scanner (09 / 12)
- Step 3** Product Registration (04)

01 / 02	Get to Know Your Vaultek® RS Series Safe	16	- LCD Brightness
03	Basic Operations	16	- Battery Status
04	Product Registration	17	- Fahrenheit/Celsius
05 / 07	Battery	17	- Temperature/Humidity
05	- Installation	17	- Tamper Detection
06	- Charging the Battery	17	- Impact Detection (DMT)
08	Master Code Programming	17	- Alert of Manual Unlock
09 / 12	Smart Align Biometric Scanner	18	- Open Door Alarm
10	- Programming Admin Prints 1 and 2	18	- Dual Entry Mode
11	- Programming Additional Prints 3 to 20	18	- Nano Key Entry Modes
12	- Deleting Fingerprints	18	- Travel Mode
13 / 15	Nano Key	18	- Factory Reset
13	- Pairing	19	Securing Your Safe
14	- Entry Modes	19	- Floor Mounting
14	- Unpairing	19	- Wall Mounting
16	Wi-Fi Setup	20	Installing the Base Plate
16 / 18	Hot Keys	21	Modular Interior
16	- Sound	22 / 23	Frequently Asked Questions / Troubleshooting
16	- Interior Light	24	<b>Customer Support</b> / Limited Warranty

## Get to Know Your Vaultek® RS Series Safe

The Vaultek® RS Series safe is a tough and rugged, quick access, Wi-Fi® enabled smart safe. Its solid structure and penetration resistant design makes it ideal for storing valuables such as firearms, rifles, jewelry, cash, and other personal items. Powered by a rechargeable lithium-ion battery, the safe combines high security with complete access control.

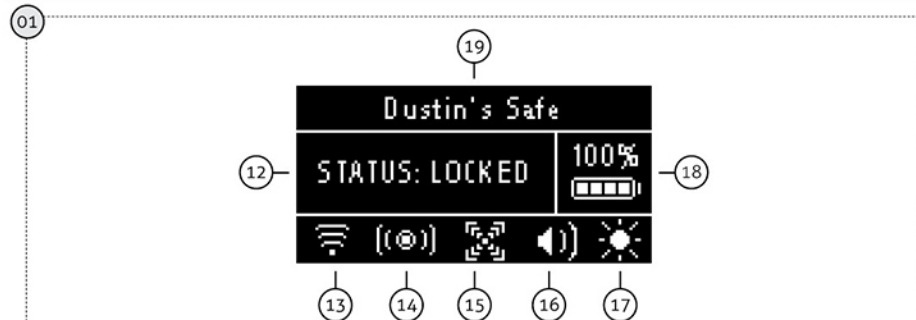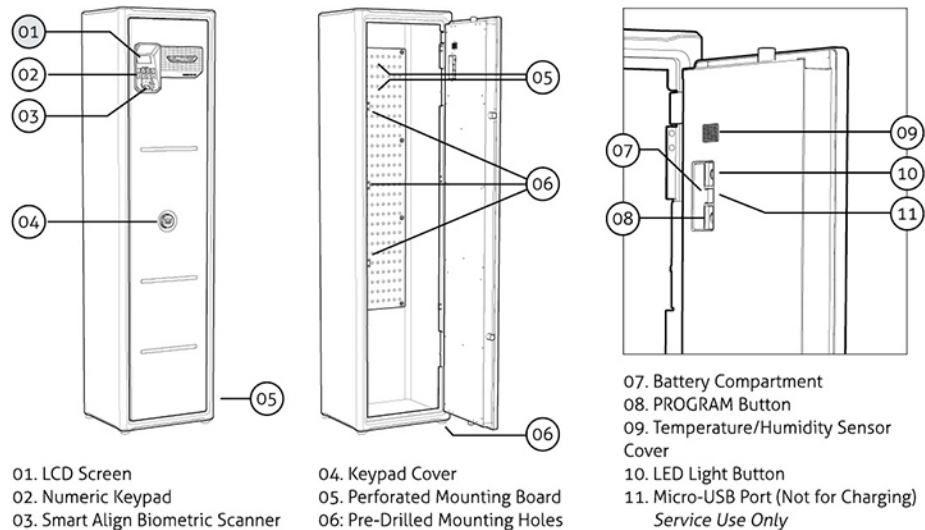


LCD SCREEN DISPLAYS SAFE INFORMATION AT A QUICK GLANCE.

- 12. Safe Status
- 13. Wi-Fi® On/Off
- 14. Nano Key Status

- 15. Impact Detection (DMT) Setting
- 16. Sound On/Off
- 17. Interior LEDs On/Off

- 18. Battery Level
- 19. Safe Name

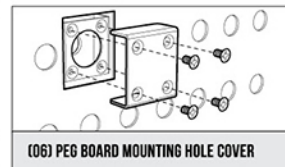

## Basic Operation

With the rechargeable battery installed, you can unlock your safe using any of the authorized access points.

**Keypad:** The numeric keypad responds quickly for rapid access and has a built-in proximity sensor that lights up when your hand brushes against the safe. See page 08 for more information.

**Biometric Scanner:** Personalized access for up to 20 unique fingerprints. See pages 09 to 12 for more information.

**Nano Key:** Remote for On Demand access. See page 13 and 15 for more information.

**Key:** Two keys are provided for manual access to the safe in the event the battery dies.

**Before using this safe,** inspect the safe to make sure the door latches properly. You can perform a quick test by using the included mechanical key. Opening and closing the safe 5 times. Do not use the product if you notice any problem or defect. Please email Vaultek customer support at [support@vaulteksafe.com](mailto:support@vaulteksafe.com).

## Basic Operation: How your Vaultek® Safe Keeps People Out

**Anti-Impact Latches:** Built to withstand forceful impacts and heavy slams.

**No External Access Points:** A combination of interior mounted hinges and extended anti-pry reinforcement bars help prevent unwanted tools from attempting to break the safe open.

**Security Sleep Mode:** Activates when six (6) consecutive incorrect keypad entries are entered or (6) incorrect fingerprint scans are made. The safe will not accept any entries for four minutes. If any additional attempts are made the alarm will beep. The security sleep mode can be cleared upon unlock of the safe by any authorized access method including the backup keys.


**Impact Detection (DMT):** Motion activated alarm can be disabled or enabled with three levels of sensitivity (Low, Medium, and High) using the safe's hot key functions, online dashboard, or Vaultek® Wi-Fi® app.

**Alert Notifications:** Wi-Fi® connectivity allows you to receive live alerts during critical safe activity. This includes battery levels, impacts, extreme temperatures, tampering, and anytime the safe is opened. See page 16.

## Product Registration

Vaultek® strongly encourages you to register your safe as soon as you receive it. Registration provides many benefits including three year warranty, technical support, and ordering replacement keys should you misplace them. Your Vaultek® safe has a unique product number on the inside of the battery door and a 4-digit ID number engraved on the keys. You will need these numbers to register your safe.

- 1 Locate your product number. It is printed on the first page of this user manual and on the back of the battery door (Figure A).
- 2 Find your 4-digit ID number engraved on the keys (Figure B).
- 3 Please visit the Vaultek® website at [vaulteksafe.com](http://vaulteksafe.com) and click Support/Product Registration.
- 4 Enter the required information in the form and click submit.

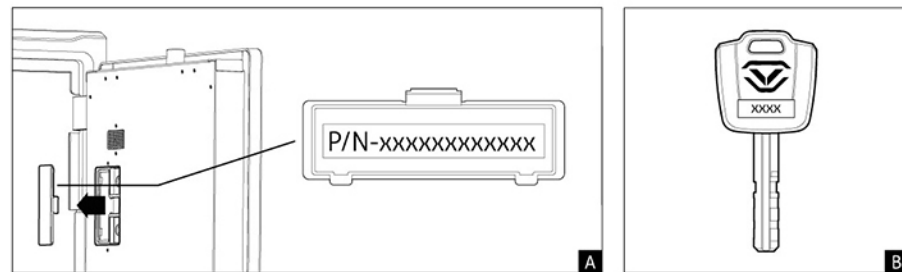

For setup, tutorials, and FAQs visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/)

## Battery: Installation

Your safe uses a 3.7V 18650 rechargeable lithium-ion battery with a flat top. A minimum 2000 mAh capacity is required, however 2200 mAh or higher can be used to increase operation time.



- 1 To get started, insert one of your backup keys into the keyhole located under the keyhole cover on the front door (Figure C). Push key in and rotate the key clockwise to open the safe.
- 2 Locate the battery compartment inside the safe on the backside of the front door (Figure D).
- 3 Remove the battery cover by pressing down on the tab near the top of the cover.

**Tip!** For easy removal make sure to place the pull string over the battery before replacing the cover.

- 4 Insert the 18650 rechargeable lithium-ion battery (included in accessory box) into the battery compartment. Note that your Vaultek® safe automatically detects the polarity of the battery and can be installed in either direction.
- 5 When the battery is inserted you will hear a short welcome tone and the keypad will light up.
- 6 Once you hear the tone replace the battery cover. You are now ready to program your safe.

**Important!** Your Vaultek® safe will automatically lock when you fully close the door.

**Tip!** Due to powerful features of the RS Series it is recommended to keep the safe plugged in.

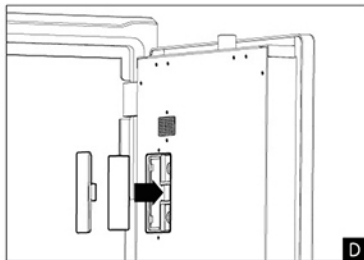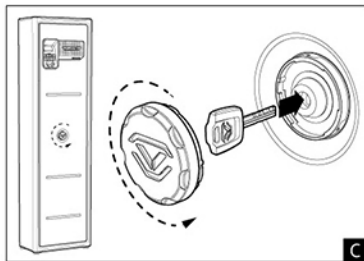

## Battery: Charging the Battery

Your Vaultek® safe is powered by a rechargeable lithium-ion battery and comes with a charging kit which includes an AC power adapter and a charging cable. Safe and charging cable can be used with all international power adapters. Under normal usage, a fully charged battery can last up to one month.


Due to powerful features of RS Series safes it is recommended to keep the safe plugged in.

- 1 **To recharge the safe**, plug the charging cable into the receiving jack located on the lower right side of the safe (Figure E) and connect to a standard USB port or wall outlet using the AC power adapter. Approximate recharge time is 3.5 hours.
- 2 The LCD screen will indicate the power status.

### Charging Tips!

- A After installing the battery, use the charging kit provided to charge the unit 100%.
- B The charging kit can also function as an external power supply, which means you can open your safe even when the battery is depleted.
- C Leaving your safe plugged in continually will **not** harm the safe or battery.
- D A specially designed Vaultek® Powerpack is available as a separate accessory to extend operation time.
- E **Important!** The adapter used to charge the battery should output 5V/2000mA or above when using the charging cable.

See the next page for additional information about the battery.

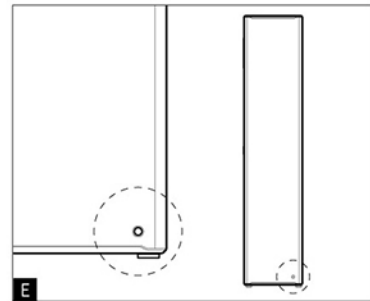



## Battery: Maintenance

### Battery Maintenance: Testing the Battery Power

To check the battery level, press and hold '6' and '8' key together on the keypad for 3 seconds. The LCD screen will indicate the battery level.

### Battery Maintenance: Low Battery

If the LED on the control panel blinks RED several times and you hear several rapid beeps when opening the safe, your battery level is critically low and your safe needs to be recharged immediately.

### Battery Maintenance: Soft Reset Tip!

In the event the battery dies or a soft reset is performed (battery removal and installation) the safe will restore default settings for DMT, interior light, sound, Nano Key, and Alert of Manual Unlock feature. These settings will need to be readjusted, however the master code and fingerprint scanner will not be affected.

**IMPORTANT!** Do not use a battery which has physical damage such as scratches and dents on the housing. Replace the battery every 3 years.

**IMPORTANT!** Use a 3.7V 18650 rechargeable lithium-ion battery with a flat top. A minimum 2000 mAh capacity is required, however 2200 mAh or higher can be used to increase operation time.

**IMPORTANT!** The adapter used to charge the battery should output 5V/2000mA or above when using charging cable.


## Master Code Programming

**WARNING!** First time users should change the default code as soon as possible to prevent unauthorized access.

### Code Requirements Tips!

- Your code can be a minimum of 4 and a maximum of 8 digits. We recommend a code 6 to 8 digits in length using at least one of each key to make it more difficult for someone to guess your code.
- Avoid easy-to-guess digits such as 1234, 1111, 2222, etc.
- Two keys cannot be pressed simultaneously.
- Programming a new code will overwrite your previous code.
- Default master code is 1-2-3-4 on the keypad.

- 1 Open the safe. With the safe open, press and hold the '1' key then the "PROGRAM" button together (3 seconds) (Figure F) until the LCD screen prompts you to enter your new code.
- 2 Enter your NEW master code.
- 3 Press and hold the '1' key then the "PROGRAM" button together a second time (3 seconds) until the LCD screen prompts you to re-enter your new code.
- 4 Enter your NEW master code a second time.
- 5 Press and hold the '1' key then the "PROGRAM" button together a third time (3 seconds) until the LCD screen confirms the code change is complete.

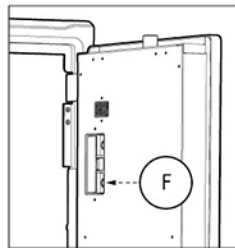

**Troubleshooting!** If you make a mistake and the new code will not work, simply start over with step 1.

**Security Sleep Mode:** For your security, the safe will time out and sleep for 4 minutes if 6 incorrect entries are made.

For setup, tutorials, and FAQs visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/)


## Smart Align Biometric Scanner: Overview + Tips!

Biometrics are methods of authenticating the identity of a person based on physical or behavioral characteristics. Biometric fingerprint authentication refers to technology that measures and analyzes human physical characteristics for identification and authentication purposes. The smart align biometric system guides your finger placement for consistent and accurate results.

Everyone has their own unique fingerprints, and what makes them unique is the pattern of ridges, valleys, and minutiae points that comprise an individual print. Vaultek® and their leading engineering group has developed proprietary technology to read and match fingerprints with unmatched speed and accuracy. That means that only authorized users have access to your valuables. The safe is capable of storing fingerprint data for up to 20 unique authorized users. A user consists of 5 scans of the same finger during registration. Once a user's fingerprint data is stored in the safe and encrypted, it cannot be copied or stolen.

### Helpful Programming Tip!

- **Place the core of the fingerprint flat** (Figure G+H+I) over the center of the scanner in line with the side LEDs (this allows the scanner to read where most of the fingerprint detail is located) see (Figure G).
- Adjust your finger slightly between scans for increased accuracy (Figure I).
- Excessive moisture, lotions, or dirt will affect your fingerprint and may cause inaccurate sensor reading.
- **Troubleshooting!** If you are having difficulty with your print, program the same fingerprint 4 or 5 times. You have 20 slots available for programming and you can also try your thumb as it has more surface area to read.

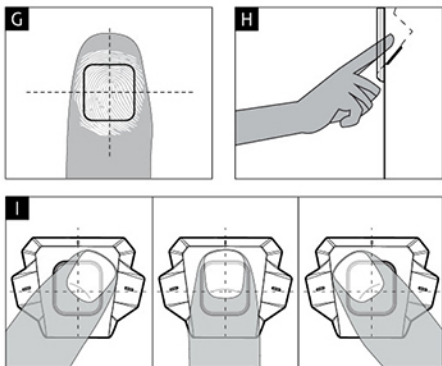

## Smart Align Biometric Scanner: Programming Admin Prints 1 and 2


The 1st and 2nd fingerprints will be recognized as administrative fingerprints and will be used to authorize additional users. To program additional users please refer to the next page.

**Tip!** The first two enrolled fingerprints are admin prints, and are required to authorize enrolling additional users (3-20).

**Tip!** Each fingerprint requires 5 registration scans to be enrolled into the safe.

### STEP 1 : Programming Admin Print 1 of 2

- 1 Open the safe. Program 1st fingerprint by pressing and holding the '2' key then the "PROGRAM" button together (3 seconds) (Figure J) until the screen prompts you to scan the 1st of five scans.
- 2 Place your finger on the fingerprint scanner for the 1st of five scans. When the safe beeps, and the screen prompts the next scan remove your finger.
- 3 Place finger again over the scanner until the safe beeps and the screen prompts the next scan and lift. You will repeat this process until all scans (1-5) are programmed. The LCD screen will indicate program complete.
- 4 Close door and test to see if the safe will open using your fingerprint.

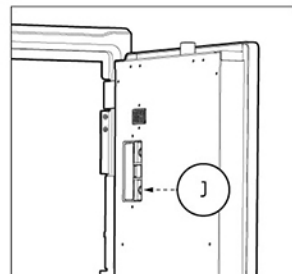

**Troubleshooting!** If the screen indicates failed to complete then start over with step 1.

### STEP 2 : Programming Admin Print 2 of 2

- 1 Repeat steps 1 through 4 to add the 2nd administrative fingerprint.

**Tip!** To program prints (3-20) refer to page 11.

**Troubleshooting!** If you experience issues refer to the helpful programming tips on page 09.



## Smart Align Biometric Scanner: Programming Additional Prints 3 to 20

After the first two Admin fingerprints have been locked in, you can add additional users or fingerprints, up to 20 unique users in total. This is very helpful in the event the fingerprint scanner is having a hard time reading your initial fingerprints, or if you wish to grant other users authorized access to your safe. Any additional users programmed require authorization from one of the two Admin fingerprints.

- 1 Open the safe. Program additional fingerprints by pressing and holding the '2' then "PROGRAM" button together (3 seconds) (Figure J on page 10). The screen will prompt you to scan one of the administrative fingerprints.
- 2 Place one of the first two programmed administrative fingerprints on the scanner and remove when the safe beeps and screen authorizes the print. You can now program a NEW fingerprint.
- 3 Using the helpful programming tips provided on page 09 place the NEW finger on the scanner. When the safe beeps and the screen prompts the next scan remove your finger.
- 4 Place finger again over the scanner until the safe beeps and the screen prompts the next scan and lift. You will repeat this process until all scans (1-5) are programmed.

**Tip!** Repeat steps 1 through 4 to add additional fingerprints.

**Troubleshooting!** If you are having difficulty with your print, program the same fingerprint 4 or 5 times. You have 20 slots available for programming and you can also try your thumb as it has more surface area to read.

**Tip!** Program the same fingerprint 4 or 5 times. You have 20 slots available for programming.

Continue on next page to learn how to delete fingerprints.

## Smart Align Biometric Scanner: Deleting Fingerprints

Individual fingerprints can not be deleted from the keypad on the safe. Following this procedure will erase all of the fingerprints including both administrative fingerprints. If you wish to delete individual fingerprints, you must use the Vaultek® Wi-Fi® app or online dashboard. This procedure will not affect the keypad master code.

**Tip!** Fingerprints can also be temporarily disabled. Using the online Web Dashboard or Vaultek® Wi-Fi® app individual prints can be temporarily disabled and can not access the safe. This does not delete the fingerprint, only temporarily disables it until enabled again as needed.

- 1 Press and hold the '3' key then the "PROGRAM" button together (Figure J on page 10) until the safe beeps and the screen prompts you to enter your master code. Enter your master code on the keypad. If the code is correct, the safe will beep and the screen will indicate deletion of all the fingerprints.

## Smart Align Biometric Scanner: Low Success Rate

If you are having difficulty with your print, program the same fingerprint 4 or 5 times. You have 20 slots available for programming and you can also try your thumb as it has more surface area to read.

- 1 Let's delete the fingerprints and start over. Refer to the deleting fingerprints section above.
- 2 Now let's try reprogramming your fingerprint using the helpful tips on page 09.
- 3 Open the safe. Program 1st fingerprint by pressing and holding the '2' key then the "PROGRAM" button together (3 seconds) until screen prompts you to scan the 1st of five scans.
- 4 Place your finger on the fingerprint scanner for the 1st of five scans. When the safe beeps, and the screen prompts the next scan remove your finger.
- 5 Rotate your finger position and place your finger on the scanner again. You will repeat this process until all scans (1-5) are programmed. The LCD screen will indicate program complete.
- 6 Close the safe drawer and test to see if the safe will opens using your fingerprint.

For setup, tutorials, and FAQs visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/)

## Nano Key

Your Vaultek® safe supports quick access with the included Nano Key. **Take caution when using this feature and be responsible. Security can be compromised in the event it is lost or stolen. Only pair Nano Key after thoroughly understanding the inherent risks.**

**WARNING** anyone including children can access the safe via Nano Key.

**WARNING** On Demand entry mode can open a safe in another room and/or out of sight. To reduce risk of an unattended open safe we recommend using Progressive entry mode.

**ALWAYS** unpair Nano Key in the event it is lost or stolen.

**IMPORTANT!** Nano Key should be mounted less than 6 feet away from the safe for proper operation. Use in long range is not recommended as it may cause accidental opens.

### Nano Key: Pairing

**Important!** Be sure to follow **ALL** steps for proper function:

- 1 Press and hold the '5' key then "PROGRAM" button together (3 seconds) until the LCD screen indicates CONNECTING.
- 2 Aim Nano Key towards the safe and press. If the safe beeps and the screen indicates COMPLETE then the Nano Key has paired successfully. If the screen indicates FAILED TO PAIR then simply start over with step 1.
- 3 **Set Entry Mode:** After pairing, Nano Key will be immediately active to test functionality, but then deactivate. Nano Key settings will need to be set to either On Demand or Progressive in order for Nano Key to open your safe. See next page for more information.

**Troubleshooting!** If Nano Key works for a moment then stops working after pairing then you need to start over with step 1. After pairing you must assign an entry mode to finalize the pairing sequence.

Continue on next page for more information about Nano Key.

### Nano Key: Entry Modes

After pairing you can toggle between access modes from the keypad, Wi-Fi® smartphone app, or the online Web Dashboard. To toggle modes from the safe's keypad press and hold the '6' key then "PROGRAM" button together until the LCD screen indicates each mode as below.

#### - OFF

- **Progressive Entry Mode:** Safe goes into sleep mode and will require you to wake up the safe before using Nano Key. You can wake up the safe by pressing any key or brushing your hand across the keypad of the safe (backlit keys will turn RED).

- **On Demand Entry Mode:** This mode grants immediate access to your safe without having to wake it up.

**WARNING!** On Demand entry mode can open a safe in another room and/or out of sight. To reduce risk of an unattended open safe we recommend using Progressive entry mode.

**Important!** On Demand entry mode requires significant power usage and can greatly reduce operation time. We suggest setting the Nano Key to Progressive entry mode to conserve battery, unless the safe is constantly plugged into a power outlet.

### Nano Key: Unpairing

**Tip!** Disabling the Nano Key function from the Wi-Fi® app, Web Dashboard, or safe's keypad will NOT delete a paired key from the safe's memory. In the event a Nano Key is lost or stolen, you can delete the lost Nano Key from the safe's memory by using a couple different methods:

- A Press and hold '5' key then "PROGRAM" button together (3 seconds) until the LED flashes RED and the LCD screen indicates CONNECTING. This is the same sequence used when initially pairing. After the screen indicates FAILED TO PAIR the safe will delete a paired Nano Key from memory.
- B Anytime a new Nano Key is paired with the safe, the previous key will be erased from the safe's memory.

## Nano Key

### Nano Key: Multiple Safe Management

- A** Multiple Nano Keys can not pair with the same safe. It is recommended to pair one Nano Key per safe.
- B** Recommended setting when using the Nano Key is Progressive entry mode.
- C** You can manage multiple safes through the Vaultek® Wi-Fi® smartphone app and Web Dashboard.


**CAUTION** when managing multiple safes in On Demand entry mode there is a chance you can open all safes within range.

### Nano Key: Battery Replacement

The pre-installed battery will last approximately two years before requiring replacement. When needed follow the steps below to complete replacement.

- 1** Access the battery compartment by twisting the bottom battery cover counterclockwise, then remove the cover.
- 2** Remove the old battery by firmly lifting up on its sides to release it from its clips. A small screwdriver can help pry the battery out if used carefully.
- 3** Insert a new model CR2032 battery positive side (+) facing up. Be sure and insert the battery edge under the brass clip first (Figure K), then press firmly into place (Figure K). Replace the battery cover and twist clockwise to tighten in place.

**Tip!** The battery will not install correctly without first being placed under the brass clip. Damage to the remote may occur.

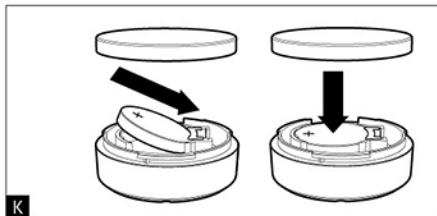

## Wi-Fi Setup

Access online setup using the code on the right. Simply scan the code with your phone's camera or visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/) and select your model.

**Tip!** We suggest connecting your safe directly to the router using the Vaultek® WiFi app or with the router's WPS button. Once connected, view your safe's online dashboard at [dashboard.vaulteksafe.com](http://dashboard.vaulteksafe.com).

If you have any questions about your Vaultek® safe or need help configuring the system, please visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/) and/or email our support team at [support@vaulteksafe.com](mailto:support@vaulteksafe.com).



## Hot Keys More Hot Keys on the next page.

Your safe has a list of available settings that can be changed from either the safe or Vaultek® Wi-Fi app.

### Sound

Press and hold '1' and '3'

To toggle the sound ON/OFF press and hold keys '1' and '3' together for 3 seconds. The screen will indicate the sound is ON and beep or the screen will indicate OFF and not beep.

### Interior Light

Press and hold '5' and '7'

With the light toggled to ON you can press the LIGHT button inside the safe to illuminate the LED lights and you can also adjust the brightness from the Vaultek® Wi-Fi® smartphone app or Web Dashboard. If the light is toggled OFF the light will be disabled. To toggle the interior light ON/OFF press and hold keys '5' and '7' together for 3 seconds.

### LCD Brightness

Press and hold '5' and '8'

The LCD screen has four brightness levels: 25%, 50%, 75%, and 100%. To toggle the LCD brightness press and hold '5' and '8' together for 3 seconds. The screen will indicate the brightness level.

### Battery Status

Press and hold '6' and '8'

To check the battery level press and hold keys '6' and '8' together for 3 seconds. The screen will indicate the battery level. See pages 06 to 07 for more information.

## Hot Keys

### Fahrenheit/Celsius

Press and hold '2' and '6'

By default, the safe will measure temperature in Fahrenheit. By pressing keys '2' and '6' together you can toggle the display to show temperature in either Fahrenheit or Celsius.

### Temperature/Humidity

Press and hold '2' and '5'

Your Vaultek® safe has built in sensors to monitor the internal temperature as well as the relative humidity inside your safe. Press keys '2' and '5' together to display the information on your safe's LCD screen. You can also monitor the safe's temperature and humidity from the Vaultek® Wi-Fi® smartphone app and online Web Dashboard. You even have the option to set thresholds and be alerted of any significant changes.

### Tamper Detection

Press and hold '2' and '4'

Tampering includes incorrect keypad entries as well as incorrect fingerprint scans. To check for tampering press and hold keys '2' and '4' together for 3 seconds. The screen will indicate TAMPERING or CLEAR. You can reset the tamper detection by opening the safe through one of the authorized entry points.

### Impact Detection (DMT)

Press and hold '7' then "PROGRAM" button

Your Vaultek® safe has a built-in accelerometer and corresponding alarm that alerts of any attacking to your safe including bumps and impacts, DMT (Impact Detection). DMT is enabled by default and its sensitivity has three settings; Low, Medium, and High. You can toggle through these settings by pressing and holding the '7' key then "PROGRAM" button together for 3 seconds. The screen will indicate LOW, MEDIUM, and HIGH as well as DISABLED.

### Alert of Manual Unlock

Press and hold '3' '6' then "PROGRAM"

If the Alert of Manual Unlock is ON, and someone opens the safe with either the key or by picking the lock, the keypad will start flashing and beep for 10 seconds. To toggle Alert of Manual Unlock press and hold keys '3' and '6' then "PROGRAM" button together for 3 seconds. The screen will indicate ENABLED or DISABLED. If ON and activated it can only be cleared by entering the master code or an authorized fingerprint. Default is OFF.

### Open Door Alarm

Press and hold '3' and '5' then "PROGRAM" button

Your safe features an open door alarm that will sound when the safe door is left open for more than 8 minutes. By default, this alarm is ON. To toggle OFF press and hold keys '3' and '5' then "PROGRAM" button together.

### Dual Entry Mode

Press and hold '8' then "PROGRAM" button

If Dual Entry is toggled ON, you will be required to enter your master code and fingerprint (and vice versa) to open the safe. This mode requires that at least one fingerprint be programmed into the safe. To toggle Dual Entry ON/OFF press and hold the '8' key then "PROGRAM" button together for 3 seconds. The screen will indicate ENABLED or DISABLED.

### Nano Key Entry Modes

Press and hold '6' then "PROGRAM" button

Nano Key has THREE modes: OFF, Progressive Entry Mode, and On Demand Entry Mode. **OFF** disables Nano Key access. **Progressive Entry Mode** requires that you wake the safe first (keypad illuminates red) and then activate the Nano Key. **On Demand Entry Mode** grants immediate access when activating the Nano Key. Pressing and holding the '6' key then "PROGRAM" button together for 3 seconds will allow you to toggle through each mode from the keypad. You may also alternate modes in the Vaultek® Wi-Fi® app or Web Dashboard.

### Travel Mode

Press and hold '1' and '8'

Save battery life by disabling the proximity sensor, fingerprint sensor, keypad, Nano Key, Wi-Fi®, and status bar. To toggle travel mode ON/OFF press and hold keys '1' and '8' together for 3 seconds. The screen will indicate ENABLED or DISABLED.

### Factory Reset

Press and hold '2' and '7' then "PROGRAM" button

The Factory Reset erases ALL programmed information and restores the safe to its default settings. This includes any network configurations and enrolled fingerprints. The master code is reset to 1-2-3-4 and the safe will restart. The safe must be configured again to work with the Vaultek® Wi-Fi® smartphone app and the Web Dashboard. To perform a factory reset press keys '2' and '7' and PROGRAM together for 3 seconds.



## Securing Your Safe

Your Vaultek® safe can be secured via the included mounting screws to a flat surface, such as a closet wall, using the pre-drilled holes on the backside of the safe or the floor using the pre-drilled holes on the bottom. The backside holes are in line vertically, allowing the safe to be anchored to a single wall stud.

### Securing Your Safe: Floor Mounting



With two people, carefully tilt the safe on its side and open the safe door. Lift the interior pad to locate the foot hardware and remove all (4) feet (Figure L) to use the pre-drilled holes for mounting.

### Securing Your Safe: Wall Mounting

Remove the (3) pre-drilled hole covers (Figure M) using a phillips screwdriver or drill.


**Tip!** You can use your own hardware specific to your application.

- 1 Locate all pre-drilled holes inside safe for mounting.
- 2 Remove safe and drill pilot holes for hardware.
- 3 Position safe in place and mark holes for drilling.
- 4 Reposition safe and install/tighten hardware.

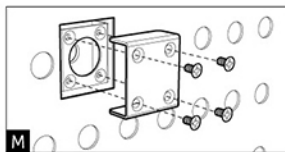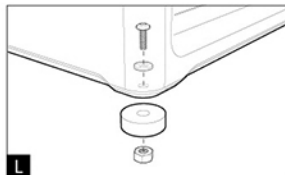


## Installing the Base Plate (Sold Separately) (Included with RS200i)

If your Vaultek® RS Series safe is not mounted to a wall or floor you will need to use the optional base plate.

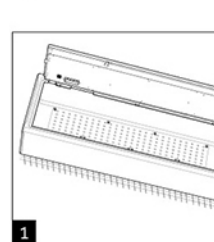


With two people, carefully tilt the safe on its side and open the safe door.

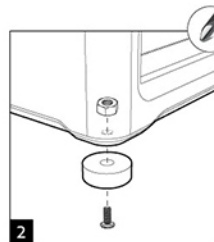


Lift the interior pad to locate the foot hardware and remove all (4) rubber feet from the safe to access the pre-drilled mounting holes.

**Tip!** Reuse this hardware to attach the safe to the base plate.

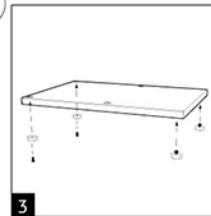

Install the rubber feet provided onto each corner of the base plate.

**Tip!** Two rubber feet are height adjustable.

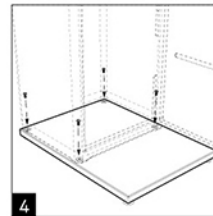

Align the base plate with the safe, and use the original hardware from step 2 to mount the safe onto base plate. With assistance, tilt safe upright when finished.


For setup, tutorials, and FAQs visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/)

For setup, tutorials, and FAQs visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/)

## Modular Interior

The RS Series safes are equipped with an interior perforated mounting board and a range of included accessories depending on the model. The perforated pattern allows you the freedom to position barrel mounts and other accessories anywhere you choose for a customized setup. Each accessory uses magnets to snap into the holes, and accessories can be easily repositioned by firmly pulling off and repositioning as needed.

**Tip!** Custom rifles/scopes can use the included extension adapters to extend the length of the barrel mounts and prevent your rifle from rubbing the safe. **View the full range of available accessories at [vaulteksafe.com](http://vaulteksafe.com)**

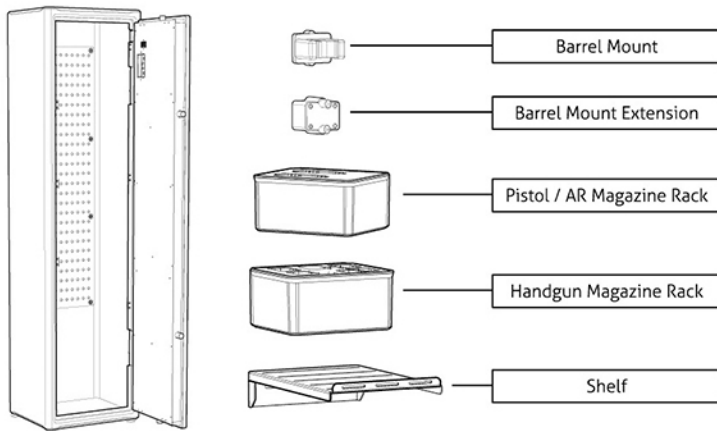

## Frequently Asked Questioned

More online at [vaulteksafe.com](http://vaulteksafe.com) under Support.

**Can I keep the safe plugged in at all times?** Leaving your safe plugged in continually will **not** harm the safe or battery.

**What happens to the fingerprints that are stored in my Vaultek® safe when the battery dies?** The safe retains all fingerprints in the even of battery failure. Once the power is restored by inserting the AC adapter cable, the unit will function as it did before the power loss.

**What type of battery does my Vaultek® safe use?** Use a 3.7V 18650 rechargeable lithium-ion battery with a flat top. A minimum 2000 mAh capacity is required, however 2200 mAh or higher can be used to increase operation time. This type battery is commonly available and in the event you do not seek Vaultek® for a replacement we recommend a brand name like Panasonic.

**Can I use a battery of more than 2000 mAh?** Yes, a minimum 2000mAh capacity is required, however 2200 mAh or higher can be used to increase operation time.

**How do I improve fingerprint success rate?** Refer to page 09 for tips.

**If I cut my finger, does the fingerprint heal the same as before and will it open my safe?** Usually yes, although if the cut is significant or requires stitches scar tissue may form as a result causing a change in your fingerprint. That is why we recommend enrolling additional user fingerprints and also fingerprints from your other hand.

**What accessories are available?** Refer to our website to see all the available accessories.

**What other models are available?** Refer to our website to see all the available models. Also, feel free to sign up for our newsletter to receive the latest news on all things Vaultek®.

**How to setup up Wi-Fi?** Visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/) for complete setup instructions and tutorial videos.



## Troubleshooting

If you experience any issues with your safe, try the following solutions. There are more troubleshooting suggestions online at [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/).

### **Nano Key is not working.**

After pairing you need to assign an entry mode. Refer to Step 3 on page 13. After Nano Key is paired you need to assign to either On Demand or Progressive entry mode, otherwise Nano Key will disable after pairing.

### **Fingerprint scanner works sometimes and not others.**

We have a few suggestions to help improve the success rate on page 09.

### **The keypad is not responding**

Remove the battery and reinstall. This is a soft reset for the safe. See if you are able to open the safe using the keypad or reprogram the safe's master code. If you are still experiencing issues please visit Support at [vaulteksafe.com](http://vaulteksafe.com) for assistance.

### **Door is not engaging.**

The door requires a firm press. Press the door closed all the way, allowing the door bolts to fully engage.

### **Sound is not working.**

To toggle the sound ON/OFF press and hold keys '1' and '3' together for 3 seconds. The LCD screen will indicate the sound is ON and beep or the screen will indicate OFF and not beep. If the sound is toggled on and you still can't hear it, have someone else in your house listen as the sound is high pitched.

### **Unable to change master code.**

Refer to page 08 of the user manual or check our tutorials online at [vaulteksafe.com/support/rs-series/](http://vaulteksafe.com/support/rs-series/).

**Soft Reset Tip!** Remove the battery and reinstall. This is a soft reset to the safe. Refer to page 07 for more details.

**STOP!** Do not return to retailer. If you have any questions about your Vaultek® safe or need help configuring the system, please visit Support at [vaulteksafe.com](http://vaulteksafe.com).

## Customer Support

If you have a problem with your Vaultek® safe that is not answered in the FAQ section of this manual, we encourage you to visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/).

## Limited Warranty (Terms and Conditions)

VAULTEK® IS COMMITTED TO PROVIDING PRODUCTS OF HIGH QUALITY AND VALUE AND MAKES EVERY EFFORT TO ENSURE ITS PRODUCTS ARE FREE OF DEFECTS.

Vaultek® guarantees your safe will be free of defects in materials or workmanship for a period of two years from the date of original purchase from an authorized dealer and three years with verified product registration.

The warranty is only valid for the original purchaser and not transferable. This warranty is only valid for products purchased and operated in the U.S. This warranty does not cover abuse, misuse, use in any manner for which is not designed, neglected, modification, damage inadvertently caused by the user, accidents and/or tampering.

If service is needed Vaultek will, at its option, exchange or repair without charge for parts or labor. Upon authorization of warranty service, customers are responsible for securely packaging product. Additionally, customers are responsible for costs of shipping to and from Vaultek service center.

If the claimed defect cannot be identified or reproduced, customers will be held responsible for the costs incurred. Please have the following information available before you begin a claim with Vaultek:

- Purchaser's name, mailing address, email address, and a phone number.
- Copy of receipt or online order number (if purchased directly from us or Amazon)
- Authorized Dealer Name (if applicable)
- Detailed description of the problem

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR ANY INJURY, LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE VAULTEK® SAFE.

For setup, tutorials, and FAQs visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/)

## FCC

This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement. Power is so low that no RF exposure calculation is needed.

### FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**STOP!** Do not return to retailer. If you have any questions about your Vaultek® safe or need help configuring the system, please email us at [support@vaulteksafe.com](mailto:support@vaulteksafe.com).

For setup, tutorials, and FAQs visit [www.vaulteksafe.com/support/rs-series/](http://www.vaulteksafe.com/support/rs-series/)



**VAULTEK®**

37 North Orange Ave. Suite 770 Orlando, FL 32801

VAULTEKSAFE.COM